

- | | |
|--------------------------------|--|
| 1 Cover, fuel tank (base half) | 26 Diaphragm, primer |
| 2 Seal, filler tube | 27 Nut, primer shaft assembly |
| 3 Connection, air hose | 28 Spring, compression primer |
| 4 Connection, fuel hose | 29 Valve, fuel |
| 5 Handle | 30 Washer, valve spring |
| 6 Spring, plunger | 31 Valve, pressure relief |
| 7 Rod, pressure relief | 32 Spring, relief valve |
| 8 Washer, back-up | 33 Cover, primer |
| 9 Washer, valve | 34 Filter assembly, fuel |
| 10 Washer, return | 35 Washer, cover screw |
| 11 Nut, pressure relief rod | 36 Screw, primer cover |
| 12 Spring, latch pin | 37 Frame, retaining |
| 13 Pin, latch | 38 Screw, retaining frame |
| 14 Pin, trigger | 39 Gasket, handle assembly |
| 15 Pin, pivot | 40 Gasket, handle screw |
| 16 Gasket, lens | 41 Screw, handle assembly |
| 17 Lens | 42 Line, fuel-air |
| 18 Bracket, float arm | 43 Connector assembly |
| 19 Arm and indicator assembly | 44 Connection, fuel hose |
| 20 Float | 45 Connection and check valve assembly |
| 21 Pin, float arm pivot | 46 Clamp, fuel line |
| 22 Washer, lock | 47 Clamp, fuel line |
| 23 Screw, float arm bracket | |
| 24 Shaft assembly, primer | |
| 25 Disc, primer | |

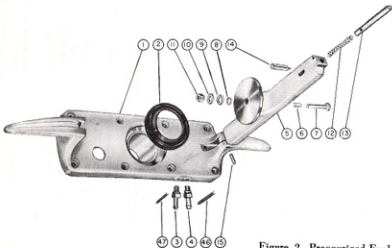
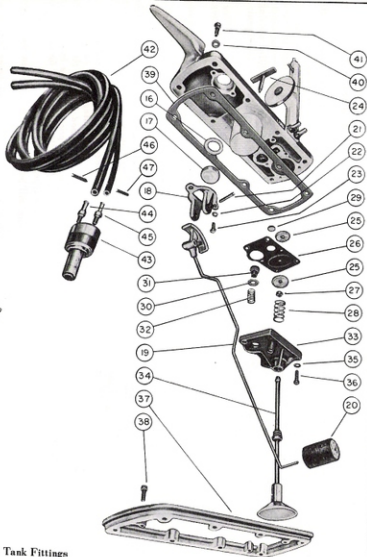


Figure 2. Pressurized Fuel Tank Fittings